




40W High Power PoE Injector

UPE5600-HIT


Quick Installation Guide

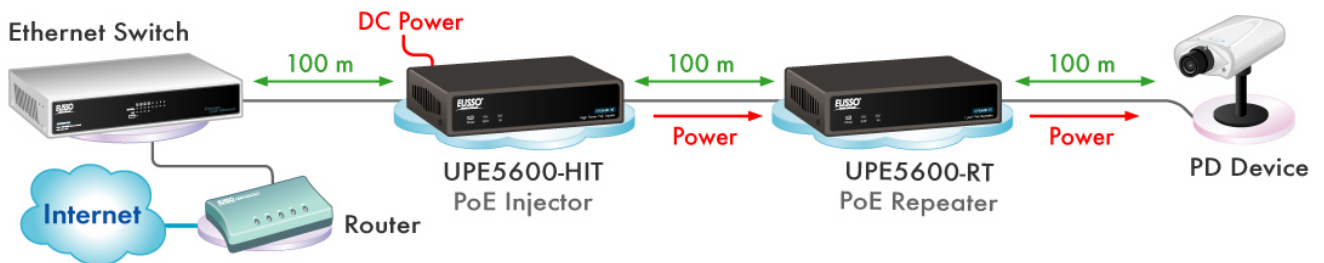

Quick Guide


Step 1: Connection to Ethernet Switch

- Connect one of the Ethernet Switch port to the **LAN IN** port of UPE5600-HIT as the following connection.
- The LED indicators "**POWER**" and "**IN**" will be on indicating Power and Ethernet connection.
- The LED indicators "**IN**" will flash to indicate Ethernet data activity.

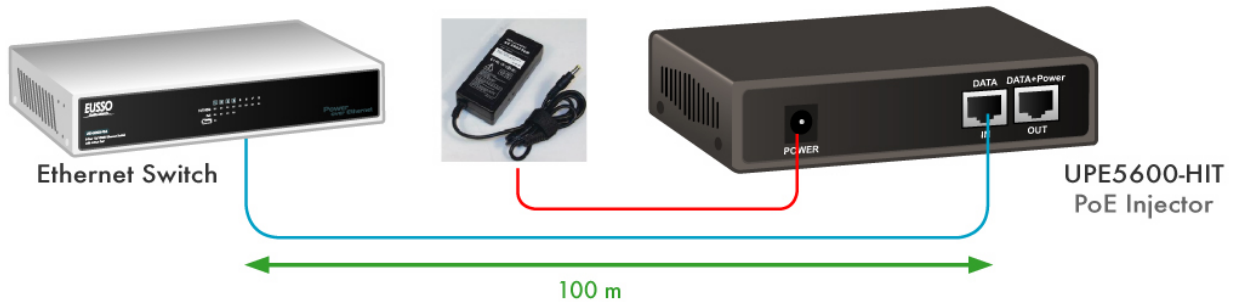

Step 2: Connection to PoE Repeater

- Connect the **LAN OUT** port of UPE5600-HIT to power up the PD device as the following connection.
- The LED indicators "**OUT**" will turn on indicating the Power and Ethernet connection.
- The LED indicators "**OUT**" will flash to indicate Ethernet data activity.

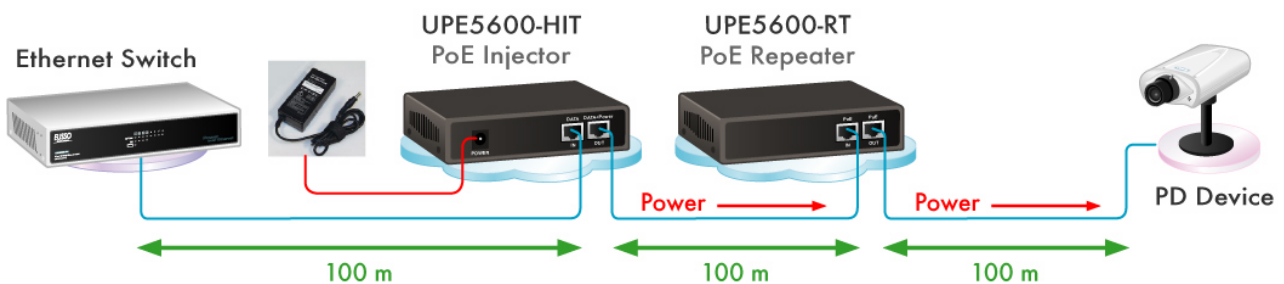

**** Note: If the Ethernet cable is not standard CAT5 cable, the UPE5600-RT may be working for shorter length than 100 meter.**